



Option 4 — Flow Totalizer Reset

To access the Flow Totalizer Reset menu in Program mode:

1. Press **P**.
2. Enter your **Advanced** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **4** for the **Flow Totalizer Reset** menu, and then press **E**.

The menu prompts you for a manual or automatic reset.

5. Use the arrow keys to select either **MANUAL RESET** or **AUTOMATIC RESET**, and then press **E**.

Manual Reset

```
TOTALIZER RESET  
>MAN RESET ^v
```

You will be prompted to confirm resetting the totalizer.

```
RESET FLOW TOTAL  
>YES ^v
```

6. Use the arrow keys to select **YES** and then press **E**.
7. Press **P** to exit the prompt without changes.

The following information appears.

```
RESETTING FLOW  
TOTALIZER . . .
```

```
TOTALIZER IS  
RESET . . .
```

8. Press **E**, **C**, or **P** to return to the Program mode option menu.

Automatic Reset

```
TOTALIZER RESET  
>AUTO RESET ^v
```

9. You will be prompted for a reset count.



```
TOTAL RESET CNT
>1.000E+20 SCF
```

The reset count defines the maximum limit of the flow totalizer before it automatically resets to zero.

10. Enter the maximum limit using the number and decimal keys, and then press **E**.

```
RESET FLOW TOTAL
>YES ^v
```

A prompt appears to confirm resetting the totalizer now.

11. Use the arrow keys to select **YES** or **NO** and then press **E**.
12. Press **P** to exit the prompt without changes.

The following information appears.

```
RESETTING FLOW
TOTALIZER . . .
```

```
TOTALIZER IS
RESET . . .
```

13. Press **E**, **C**, or **P** to return to the Program mode option menu.