



## Option 27 — Wet and Dry Flow Rates

To access the WGF Parameters menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **27** for the **WGF Parameters** menu, and then press **E**.

---

```
WGF CORRECTION
>ENABLED    ^v
```

---

This determines if the correction for condensing is turned on or off.

4. Press **P** to continue.

---

```
PROCESS TMAX
>100.0000000 DEGF
```

---

This is the estimated saturation temperature in the pipe.

5. Press **P** to continue.

---

```
PROCESS PRESSURE
>14.7000000 PSI
```

---

This is the pressure in the line where the flow is being measured.

6. Press **H** to exit.

The main Display mode (DSP) prompt appears.