



Option 44 — Input Voltage

Note: This Option is used by Kurz for diagnostic and troubleshooting purposes.

To access the Input Voltage menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **44** for the **Input Voltage** menu, and then press **E**.

```
VPS= 2.145504
VIpH= 0.083602
```

The prompt showing sensor circuit voltages appears.

4. Press **P** to continue.

```
VLI= 0.088409
VLS= 3.000270
```

The prompt showing sensor circuit voltages appears.

5. Press **P** to continue.

```
VRtch= 2.263744
VRtcl= 0.009368
```

The prompt showing sensor circuit voltages appears.

6. Press **P** to continue.

```
VExt= 0.002873
VTemp= 1.432526
```

The prompt showing the voltage from the external input signal and the voltage to determine the sensor control board temperature appears.

7. Press **P** to continue.

```
VCal= 0.000984
```

The prompt showing voltage measured from the sensor control board voltage source appears.

8. Press **H** to exit.

The main Display mode (DSP) prompt appears.