



Option 47 — Electronics Temperature

To access the Electronics Temperature menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **47** for the **Electronics Temperature** menu, and then press **E**.

```
ELECTRONICS TEMP
 98.484    DEGF
```

The prompt appears indicating the temperature inside the electronics enclosure.

4. Press **H** to exit.

The main Display mode (DSP) prompt appears.